
Quick Guide

Welcome

Congratulations on purchasing your AudioCodes RXVCam70 PTZ Camera!

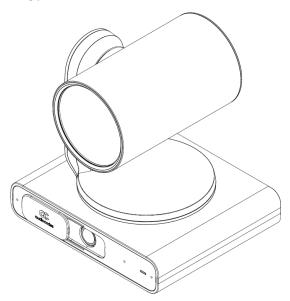

Checking Package Contents


Before installing your RXVCam70, make sure these items are included in your shipped box:

- ✓ Power Supply
- ✓ USB cable (A-C) 2m
- ✓ Wall Mount Bracket
- ✓ Power Adaptor
- ✓ Remote Control (RC)
- Ethernet cable



Getting Acquainted


The figure below shows the *front* view of the RXVCam70.

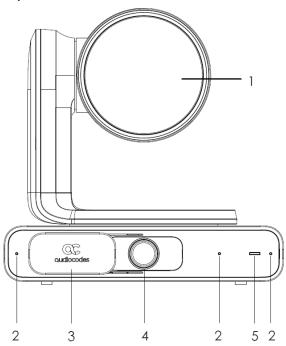

Use the table as reference to the preceding figure.

#	Description
1	PTZ Optical Zoom camera
2	Microphone array
3	Privacy cover
4	Room view wide-angle camera
5	LED indicator light

The figure below shows the back view of the RXVCam70.

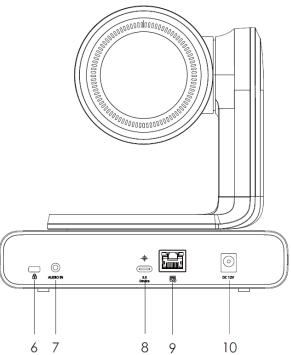

Use the table as reference to the preceding figure.


#	Description	
6	Safety lock hole	
7	Audio In port	
8	USB 3.0 port	
9	RJ-45 network port (PoE+)	
10	DC 12V port	


Installation



- The recommended installation height is 1.5m-1.8m above ground level.
- Screw specifications: 1 round head Phillips machine screw 1/4"-20UNC10)
- 4 cross-slotted round head screws with self-tapping threads (PWM3*8)


Use the figures below as reference.

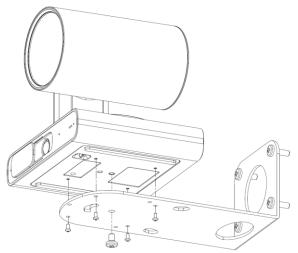

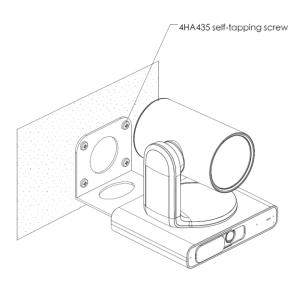

Cabling

Use the figure below as reference when cabling RXVCam70.

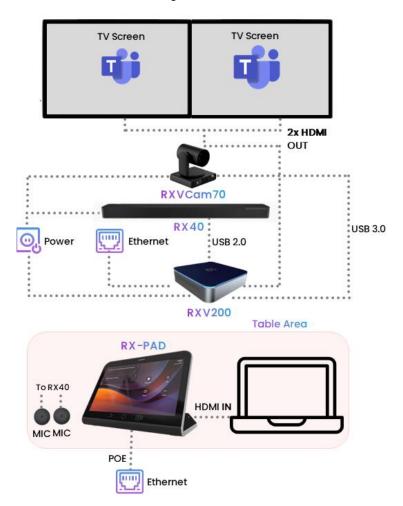



- The preceding figure shows the AudioCodes RX40 Speakerphone (under the two TVs together with RXVCam70) to illustrate the setup's audio device.
- Alternatively, other audio devices can be used, such as AudioCodes' RX15 Speakerphone
 Huddle Room Speaker (placed on the table together with RX-PAD).

Determining Camera Processes from Light Indicators


Use the table below as reference.

Light Indicator	Status
Steady red light	Standby
Orange	Boot process
Steady white light	Camera On
Flashing blue light	Upgrade process
Flash once	Remote control

Camera Tracking Mode

From RX-PAD's 'Camera Settings', select one of the following RXVCam70 camera Tracking Modes:

- ✓ Manual
- Auto framing
- ✓ Speaker tracking
- Smart Gallery

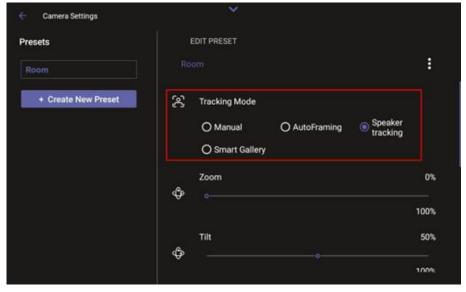


Choosing a Tracking Mode

Use the table below as reference when choosing a Tracking Mode.



- **Smart Gallery**
- Automatically identifies 1-8 people
- Automatically lays out the display
- When a person moves, the camera automatically tracks them and keeps them centered
- Switching from one person to another is accompanied by dynamic effects of entry and exit

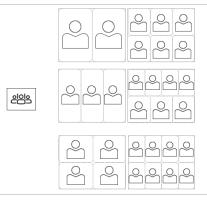




Presenter Tracking

 - [Currently supported by the RC only]
- Automatically identifies and tracks the position of the presenter to ensure that that person remains centered.
- Press the left and right keys to select the target to track.
- Press **OK** to choose the target.










Manual

- Select this option to manually adjust the Zoom, Tilt or Pan.
- In RX-PAD's 'Camera Settings' page, use the sliders to set Zoom, Tilt or Pan.
- Using the RC, after selecting an area to display, zoom in | out, move up | down, and move left | right.
- This mode does not have AI functions.

 



Speaker Tracking

- Automatically tracks speakers who speak continuously for 3-5 seconds
- Focuses on the speaker (displays them close-up allowing participants to focus more)
 - Effective distance: 6m





Group Framing


- Automatically detects and frames all the participants in the room.
- Effective distance: 8m





Getting Acquainted with the Remote Control (RC)

Use the table following the figure below as reference.

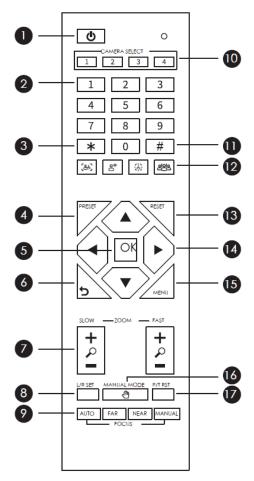

Use the table as reference to the preceding figure.

#	Item	Description
1	Standby	Press to put the camera in standby mode.
2	Number keys	Set or call presets.
3	*	Use in combination with other buttons.

#	Item	Description
4	PRESET	Set presets: Set preset + number (0-9). Preset 0 can be set as the default.
5	ОК	Confirm the selected menu or press to return the pan/tilt to the center position.
6	Back	Press to return to the previous level in the OSD (on-screen display) menu.
7	ZOOM	Slowly or quickly zoom the lens in/out.
8	L/R SET [Left/Right Setting]	Defines the gimble rotation when the right or left key (#14) is pressed:
		 Press this button + "1" key simultaneously - right and left key (#14) moves camera to the right and left, respectively.
		 Press this button + "2" simultaneously - right and left key (#14) moves camera to the left and right, respectively.
9	FOCUS	Switch focus: Auto/Manual/Far/Near
10	CAMERA SELECT	Select the camera to be controlled.
11	#	Use in combination with other buttons.
12	Al Mode	Auto Framing, Voice Tracking, People Tracking, Smart Gallery
13	RESET	Press this button + preset number key (0-9) in sequence to clear presets.
14	Pan/tilt control	① In manual mode, control the direction of the PTZ
		② In the menu, switch directions
		(3) In people tracking mode, select the tracking target
15	MENU	Press to enter or exit the OSD (on-screen display) menu.
16	MANUAL MODE	Exit Al tracking.
17	P/T RST Key	Press to start self-check of the pan/tilt.

International Headquarters

6 Ofra Haza Street Naimi Park Or Yehuda, 6032303, Israel

Tel: +972-3-976-4000 Fax: +972-3-976-4040

AudioCodes Inc.

80 Kingsbridge Road Piscataway, NJ 08854 Tel: +1-732-469-0880

Fax: +1-732-469-2298

Contact us: https://www.audiocodes.com/corporate/offices-worldwide

Website: https://www.audiocodes.com/

©2024 AudioCodes Ltd. All rights reserved. AudioCodes, AC, HD VoIP, HD VoIP Sounds Better, IPmedia, Mediant, MediaPack, What's Inside Matters, OSN, SmartTAP, User Management Pack, VMAS, VoIPerfect, VoIPerfectHD, Your Gateway To VoIP, 3GX, VocaNom, AudioCodes One Voice, AudioCodes Meeting Insights, AudioCodes Room Experience are trademarks or registered trademarks of AudioCodes Limited. All other products or trademarks are property of their respective owners. Product specifications are subject to change without notice.

Document #: LTRT-18211 Date Published: 17/07/2024

 ϵ

